1 Open + mount

Receiver housing

Unplug before mounting or wiring

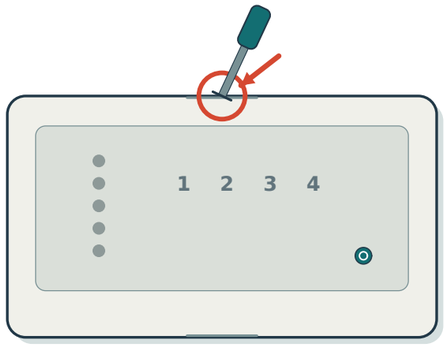

Small flat-blade screwdriver

Press the top or bottom release tab.
Separate the cover.

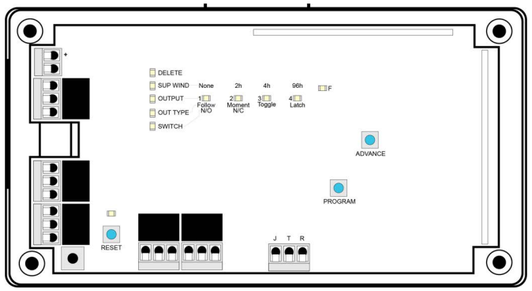

Mount the base with screws + anchors

Fix flush to the wall at the staff station.
Keep away from metal.

2 Find the output

Installer reference

Optional wiring - installer only

Actual EN4204R connections

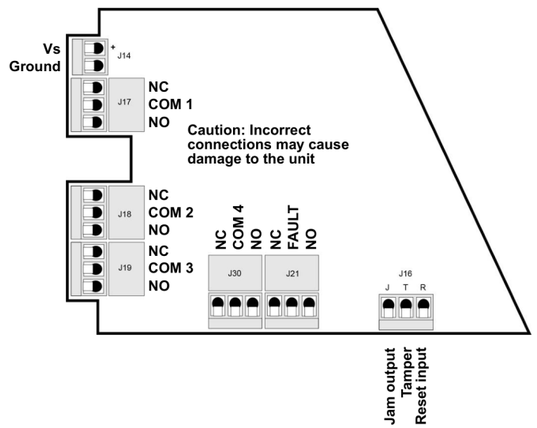

Output 1 = J17, below power terminals

Pendants	Output	Block
1	**1**	**J17**
2	2	J18
3	3	J19
4	4	J30

FAULT = J21. Optional amber indicator.

One pendant per alarm relay

3 Wire an alert

Installer reference

Optional device + supply not included

Output 1 example. Repeat on the assigned output.

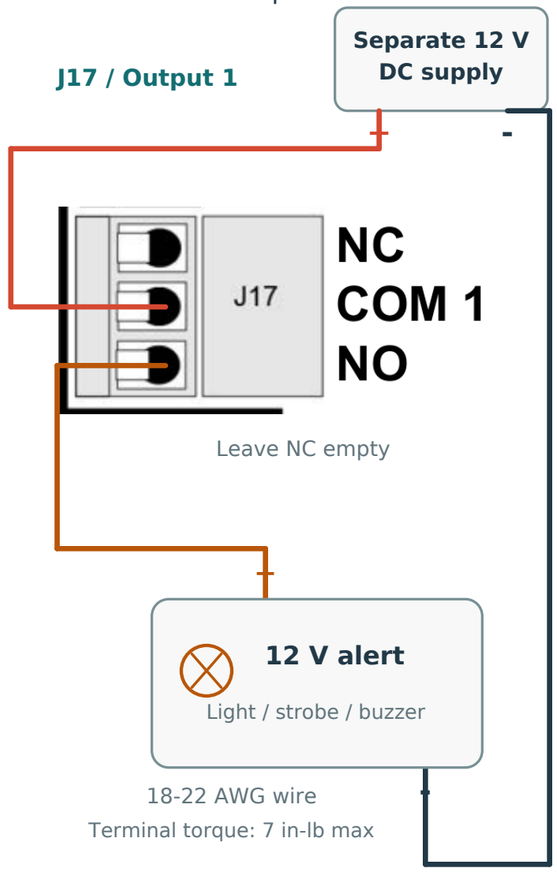

+12 V → COM/C NO → device +
Device - → supply -

Use fused 12 V DC power; below 0.5 A per output, including startup. No mains at terminals.

4 Close + power

Supplied adapter

Preconfigured - nothing to program

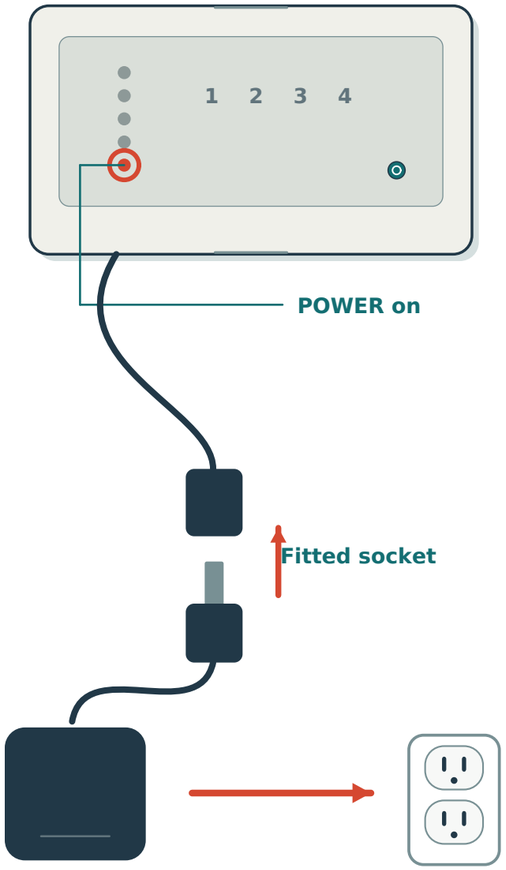

Close the cover, then plug in.

Use the supplied adapter and an outlet that stays on.

INCLUDED 4 numbered pendants + neck cords
Receiver with fitted socket + 12 V adapter

Receiver drawings: Inovonics 357-00024-03 Rev A, Figures 3 and 7. Color annotations added. Open manufacturer manual.

22 Sep 2026 | Rev C | Updated relay flow

Print 17 × 11 in, actual size, both sides; flip short edge.

5 Make a call

Pendant front button

Give each number a person or room

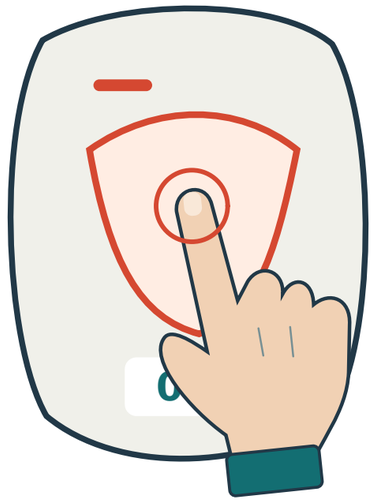

1 second

then release



Keep the number-to-room register at the staff station.

6 Find the caller

Staff station

Each output belongs to one pendant

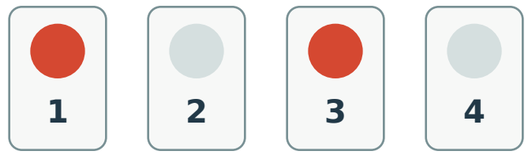

Optional wired indicators

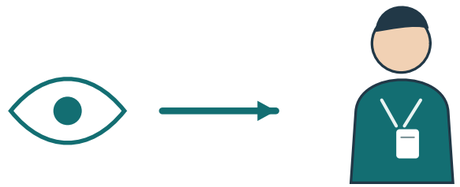

Record every caller. Attend everyone before RESET.



External indicators stay on until RESET. Receiver number LEDs show transmitter alarm status.

7 Clear calls

Receiver RESET

Attend EVERY caller before RESET

Keep receiver power on. Open the cover as in step 1.

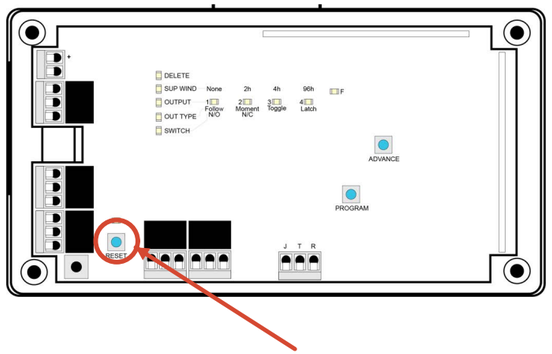

Press and release RESET once.

Touch only RESET. Close the cover.

Optional external RESET

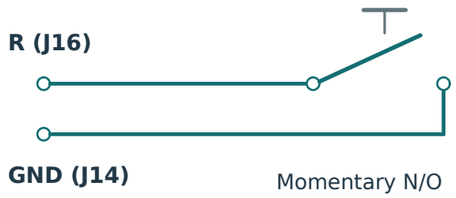

Installer: fit with power off. No voltage into RESET.

The fitted switch clears all calls too.

All latched calls clear together

8 Test + check

Before use and weekly

Test every pendant in every use room

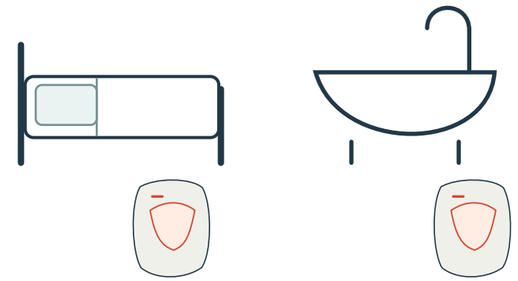

At setup and every week



PRESS	RELEASE	RESET
Output ON	Stays ON	Output OFF

After RESET, check call outputs are off and watch for new calls.

POWER off
Check outlet + plug. Use backup help.

Missed call
Try closer. Still fails? Contact support.

Fault
Advance → pendant number
Check case + battery; fix, then retest.

For help, use the support contact on your order.

Receiver drawings: Inovonics 357-00024-03 Rev A, Figures 3 and 7. Color annotations added. Open manufacturer manual.

22 Sep 2026 | Rev C | Updated relay flow

Print 17 × 11 in, actual size, both sides; flip short edge.